


# ASSEMBLY INSTRUCTIONS

**PRO28**  
28 mm Modular Fixturing System

## PRO28 Tool Cart (Part No. T28-92910)

### Contents:

- » Specifications
- » Assembly
- » Instructions
- » Maintenance
- » Safety
- » Warranty

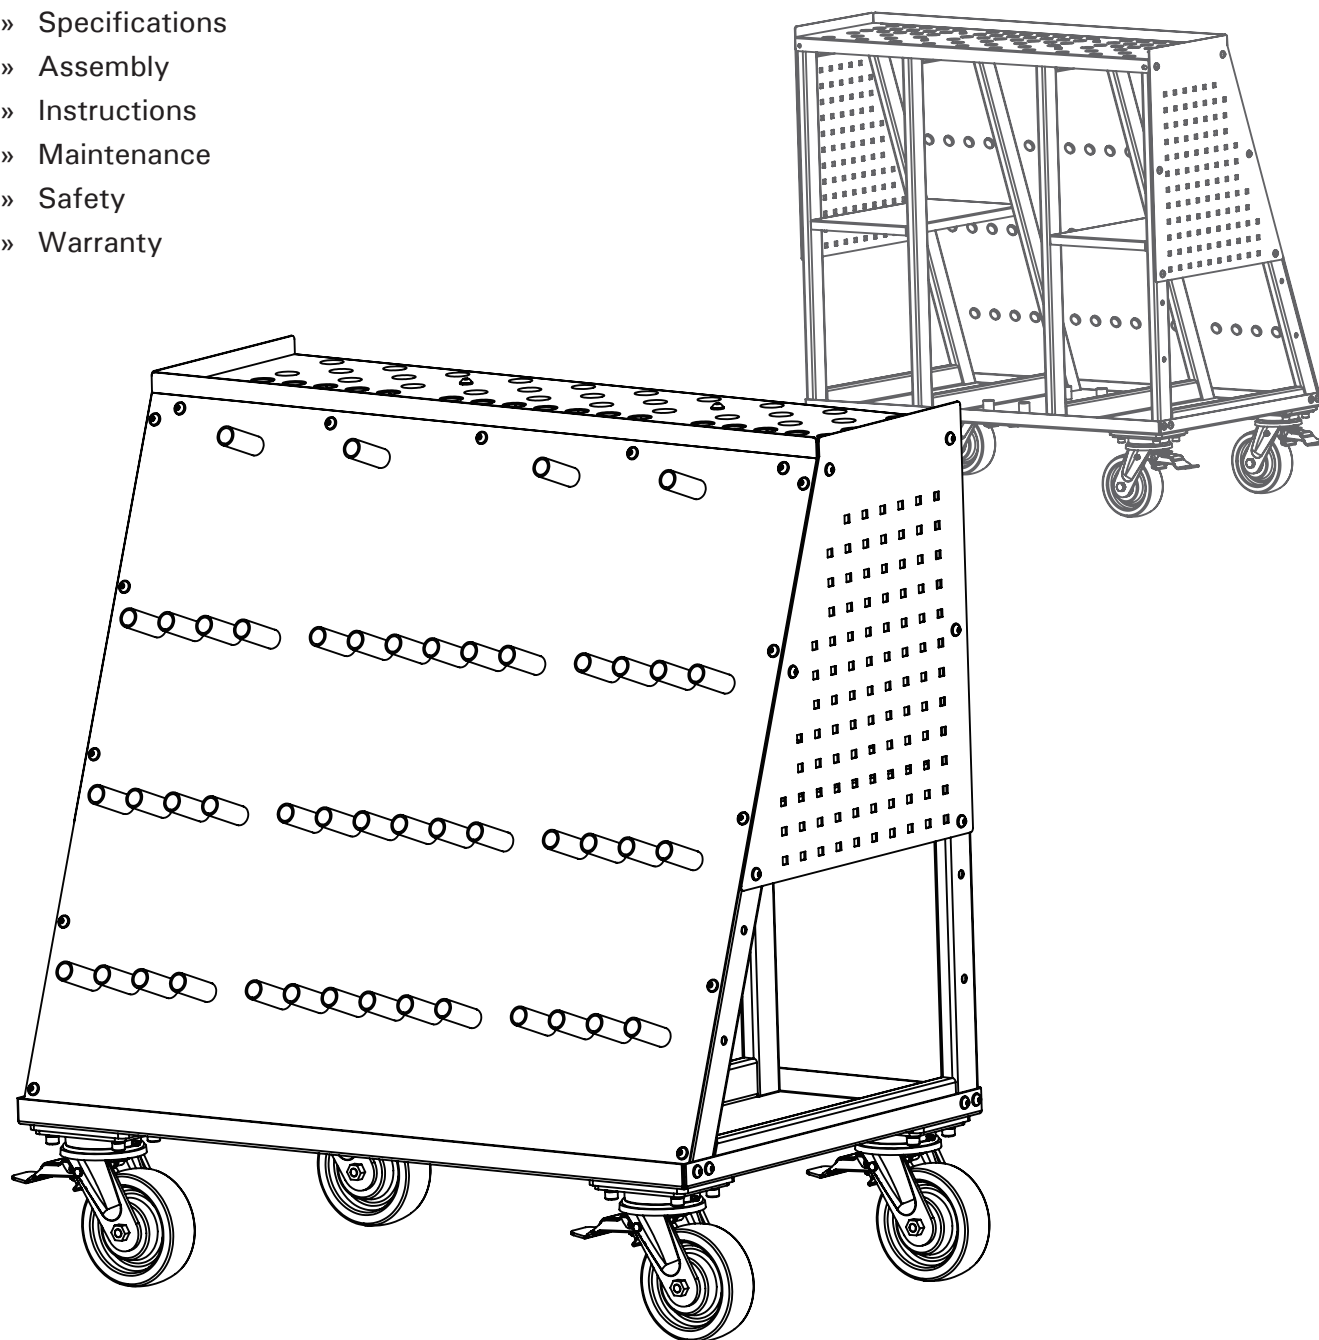


### Specifications:

Part No.	Length (mm)	Width (mm)	Height (kg)	Weight (kg)
T28-92910	640	1,070	1,110	130

# ASSEMBLY INSTRUCTIONS

Part No. T28-92910  
PRO28 Tool Cart

- » Tools required for assembly: Universal hex wrench M10.  
We suggest that you use at least 2-3 people to assemble the cart.

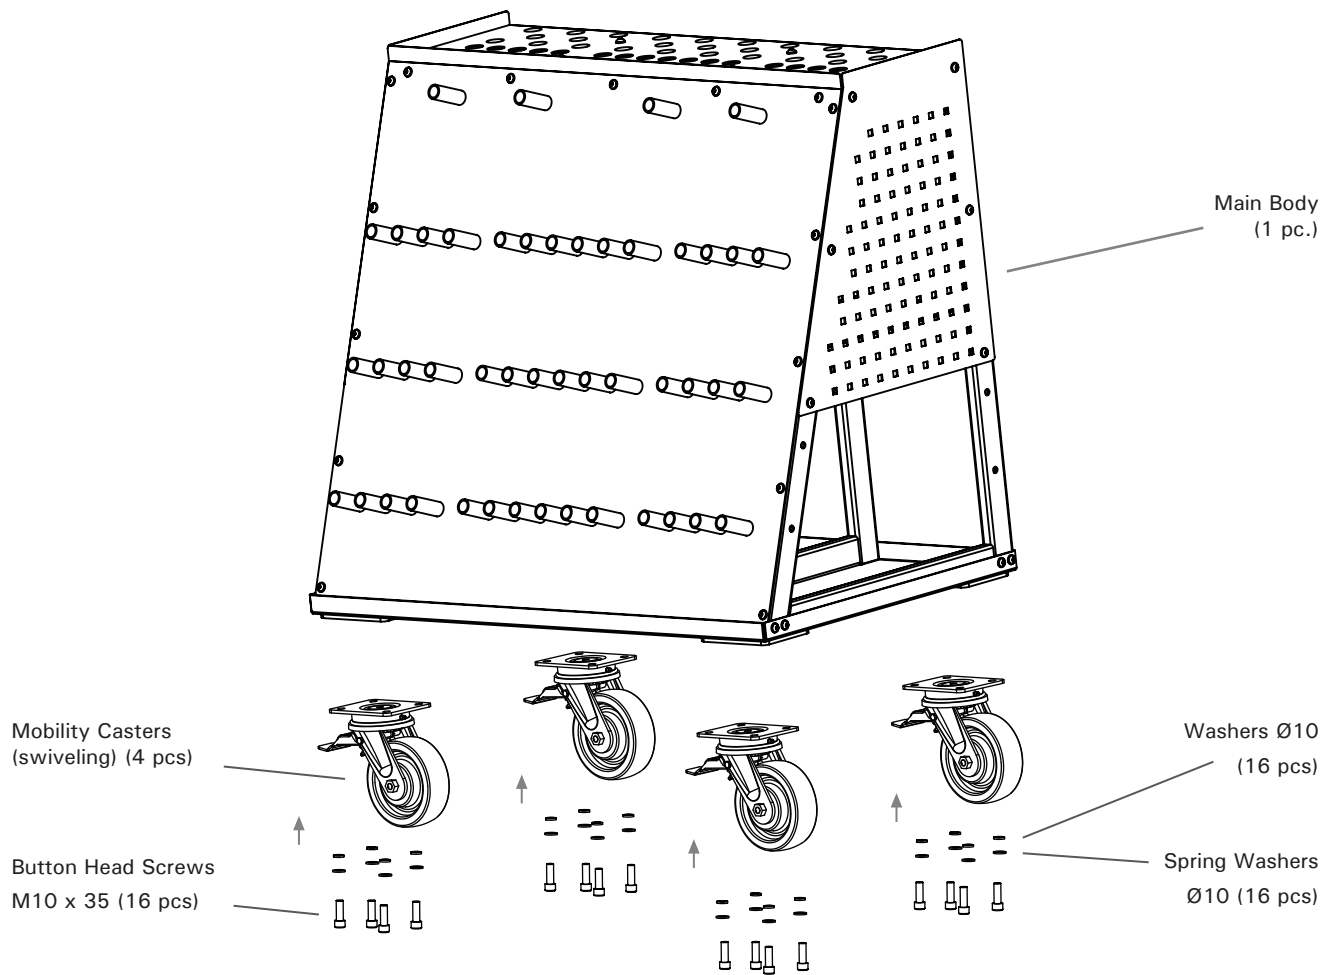

- Place the **Main Body** on a flat ground. Carefully tip it to the side to attach the casters to the bottom.
- Assemble 4 **Mobility Casters** onto the **Main Body** by using 16 sets of **Button Head Screws M10 x 35**, **Washers Ø10** and **Spring Washers Ø10** at the bottom.
- Then tighten fully, and carefully tip it on a flat surface.
- Finally lock the brakes on all **Mobility Casters** when the storage.

## Maintenance

Keep the cart clean for optimal performance. Wipe away dust and debris from the shelves and Casters.

## Safety

ALWAYS wear safety goggles, gloves, and other appropriate safety items for protection. Use the cart only for its intended purpose. NEVER stand on the cart. Do not drop the cart, throw it, or otherwise misuse the cart.

## Limited Warranty

Each STRONG HAND TOOL® product is warranted to be free from defects in material and workmanship. Return to place of purchase for a replacement if warranty applies.